

Mic off turns your microphone on and off.



Video Sources selection. Choose between Main Cam, PC, Doc Cam, DVD and AUX. Press again to deselect.

Presentation

Switch to PC (default).* Press again to switch back to main camera.

 
Press and hold

Open the Presentation menu to select other sources.

Volume + and - adjusts the system volume.



Press **OK** to open the menu. Use **Arrow keys** to navigate. When the menu is closed, use **Arrow keys** to move the camera.*



Press **Cancel** to close the main menu or go one step back in submenus.



Press and hold to close all menus.

Press and hold

Change layout on the screen. Press again to change to other layouts.



 
Press **Call** to place a call.



Use **Phone Book** to call stored contacts.



Send snapshot (only in a call). Press **OK** when done.



Use this key in combination with the **Number keys** to access camera (position) presets.

Presets

Use this key to display the **Services** menu.

Services



Zoom

Press **Zoom +** or **-** to zoom the camera in and out.

Selfview

Press **Selfview** to see your outgoing image. Press again to turn **Selfview** off.

End Call

Press **End Call** to end an ongoing call. Outside a call, press this key to go to standby.

Number keys

Use the **Number keys** to dial. When in a call, select Camera Presets with the number keys.

Press and hold

Press and hold a number to store a preset.

Pound key and A/a key

Use the **Pound key** to enter touch tone (DTMF) mode when in a call. Press **OK** when done.

A/a: When entering text, change between upper case and lower case letters.

Press and hold to go between character and numeric modes.

Press and hold

Far End

Press to gain access to the far end controls.

Help

Press to display the on-line Help.

* Not available on all video systems

How to:

• Activate the system

Picking up the remote control activates the system. The system will automatically go to Standby mode when it is not in use. It is, however, still possible to receive incoming calls.

• Place a call

Dial a number and press the green **Call** key to place a call. You can also use the Phone Book facility to select contacts to call.

• Answer an incoming call

To accept an incoming call, press "OK" or the green **Call** key on the remote control. Press the red **End Call** key to reject an incoming call.

• End a call

Press the red **End Call** key to end a call. Press the red key again or press **OK** to confirm.

• Adjust the volume

Use the **Volume** key to increase or decrease the volume. A volume bar appears at the top of the screen.

• Mute the microphone

Press the **Mic off** key on the remote control. A mute icon will appear in the top right of the screen.

Press the **Mic off** key on the remote control. The mute icon will disappear from the screen.

• Control your camera*

When the menu is closed, use the arrow keys on the remote control to control your camera.

If the menu is displayed, choose the Camera Control facility in the menu and press **OK** to control the camera.

Press **OK** when done.

Use the **Zoom** key to zoom the image in and out.

• Select your video source*

Press the **Presentation** key to show your **PC** (default). Press again to switch back to **Main Camera** (default).

To select other video sources, select the **Presentation** facility in the menu.

• Help desk contact information

* Not available on all video systems.